


# CANARINO / Istruzioni di montaggio / Fitting instructions

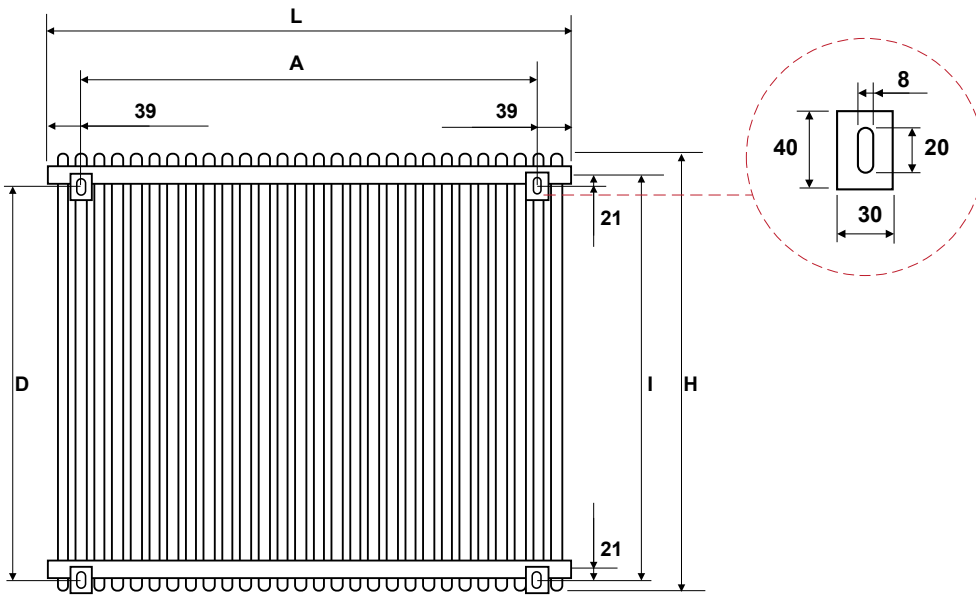

| codice     | A   | D    | H    | I    | L   |
|------------|-----|------|------|------|-----|
| C11...710  | 200 | 660  | 710  | 660  | 278 |
| C13...710  | 250 | 660  | 710  | 660  | 328 |
| C15...710  | 300 | 660  | 710  | 660  | 378 |
| C11...810  | 200 | 760  | 810  | 760  | 278 |
| C13...810  | 250 | 760  | 810  | 760  | 328 |
| C15...810  | 300 | 760  | 810  | 760  | 378 |
| C11...910  | 200 | 860  | 910  | 860  | 278 |
| C13...910  | 250 | 860  | 910  | 860  | 328 |
| C15...910  | 300 | 860  | 910  | 860  | 378 |
| C11...1010 | 200 | 960  | 1010 | 960  | 278 |
| C13...1010 | 250 | 960  | 1010 | 960  | 328 |
| C15...1010 | 300 | 960  | 1010 | 960  | 378 |
| C10...1210 | 175 | 1160 | 1210 | 1160 | 253 |
| C11...1210 | 200 | 1160 | 1210 | 1160 | 278 |
| C13...1210 | 250 | 1160 | 1210 | 1160 | 328 |
| C15...1210 | 300 | 1160 | 1210 | 1160 | 378 |
| C10...1510 | 175 | 1460 | 1510 | 1460 | 253 |
| C12...1510 | 225 | 1460 | 1510 | 1460 | 303 |
| C10...1810 | 175 | 1760 | 1810 | 1760 | 253 |
| C11...1810 | 200 | 1760 | 1810 | 1760 | 278 |
| C13...1810 | 250 | 1760 | 1810 | 1760 | 328 |
| C15...1810 | 300 | 1760 | 1810 | 1760 | 378 |
| C17...1810 | 350 | 1760 | 1810 | 1760 | 428 |
| C20...1810 | 425 | 1760 | 1810 | 1760 | 503 |
| C22...1810 | 475 | 1760 | 1810 | 1760 | 553 |
| C10...2010 | 175 | 1960 | 2010 | 1960 | 253 |
| C11...2010 | 200 | 1960 | 2010 | 1960 | 278 |
| C13...2010 | 250 | 1960 | 2010 | 1960 | 328 |
| C15...2010 | 300 | 1960 | 2010 | 1960 | 378 |
| C17...2010 | 350 | 1960 | 2010 | 1960 | 428 |
| C20...2010 | 425 | 1960 | 2010 | 1960 | 503 |
| C22...2010 | 475 | 1960 | 2010 | 1960 | 553 |